


SKIPPER

DL21

Doppler Speed Log System
for vessels >50.000GT.

Installation Manual

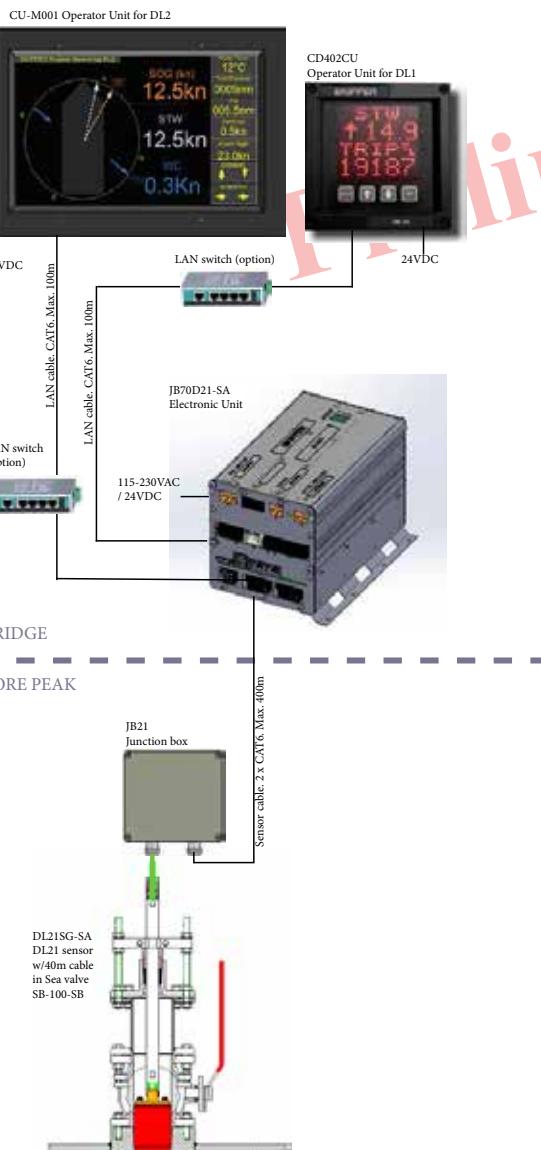

SKIPPER Electronics AS
Enebakkveien 150
P. O. Box 151, Manglerud
0612 Oslo, Norway
www.skipper.no

Telephone: +47 23 30 22 70
Telefax: +47 23 30 22 71
E-mail: support@skipper.no
Co. reg. no: NO-965378847-MVA

Document no: **DM-M006-SA**
Rev: 1424
Date: 2014-07-08

INSTALLATION MANUAL

Preliminary

Weitergabe sowie Vervielfältigung dieser Unterlage, Verwertung und Mitteilung ihres Inhaltes nicht gestattet, soweit nicht ausdrücklich zugestanden. Zu widerhandlungen verpflichten zu schadenersatz.

Toute communication ou reproduction de ce document, toute Exploitation ou communication de ou son contenu sont interdites, sauf autorisation expresse. Tout manquement à cette règle est illicite et expose son auteur au versement de dommages et intérêts.

Copying of this document, and giving it to others and the use or communication of contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages.

Sin nuestra expresa autorización, queda terminantemente prohibida la reproducción total o parcial de este documento, así como su uso indebido y/o su exhibición o comunicación a terceros. De los infractores se exigirá el correspondiente resarcimiento de daños y perjuicios.

COMMUNICATING WITH US

If you need more information, support or other assistance from us, do not hesitate to contact us:

SKIPPER Electronics AS
P. O. Box 151, Manglerud
NO-0612 Oslo
Norway

Phone: (+47) 23 30 22 70, Fax: (+47) 23 30 22 71
E-mail: support@skipper.no

SOFTWARE UPDATES AND TECHNICAL SUPPORT

Find us on the internet: www.skipper.no

YOUR FEEDBACK IS APPRECIATED

If you find errors, misspellings or poorly explained sections in this document, please do not hesitate to contact us at:

support@skipper.no

CONTENTS

Terms used in this manual	5
Units	5
Abbreviations.....	5
CHAPTER 1: GETTING STARTED	6
Overview DL21	6
Optional items DL2	7
Items Not supplied by SKIPPER	8
Power supply requirements.....	8
CHAPTER 2: HARDWARE MOUNTING	9
Placement of the electronic unit	10
The Electronic unit can be installed on a DIN rail or directly screwed onto the wall.	10
All parts of the system are connected to the electronic unit.	10
Placement of the Sensor in sea valve	11
Placement of JB21 Junction box	12
Placement of repeaters	12
CHAPTER 3: WIRING.....	13
Operator units wiring	13
JB70D21-SA Electronic Unit Wiring	14
SENSOR CONNECTION J3 (DL2) and CN1 (DL1).....	15
CHAPTER 3: STARTUP PROCEDURE	16
CHAPTER 4: OPTIONS.....	16
APPENDIX 1: INSTALLATION DRAWINGS	17
APPENDIX 2: DATA SHEETS	21
Data sheet CU-M001.....	21
Data sheet DL2SG-SA	22
NOTES	23

TERMS USED IN THIS MANUAL**UNITS**

Unless otherwise stated, all values shown on the display are as follows:

Dimensions	mm
Temperature	°C
Tilt	Degrees

ABBREVIATIONS

In addition, the following symbols are used

WT	Water Track
BT	Bottom Track
CAT5e	Category 5e cable as defined in the standard
INS	Integrated Navigational System
MED	Marine Equipment Directive
VBW	Dual ground/Water speed
VHW	Heading & Water speed
NMEA	National Marine Electronics Association


CHAPTER 1: GETTING STARTED

OVERVIEW DL21

The DL21 is 2 separate speed logs, DL1 (single axis STW) + DL2 (Dual axis STW+SOG), built into 1 sensor housing, 1 electronic unit and 2 Display units.

The new DL21 Speed Log is designed for ships over 50.000 GT with simultaneous and independent measurement of speed through water and speed over ground. The system requires no external inputs, however adding inputs from other navigational systems enhances the functionality and allows comprehensive quality control of the data.

The system fulfills all class and type regulations based on MED B (wheelmark) and is manufactured in Norway under stringent production controls.

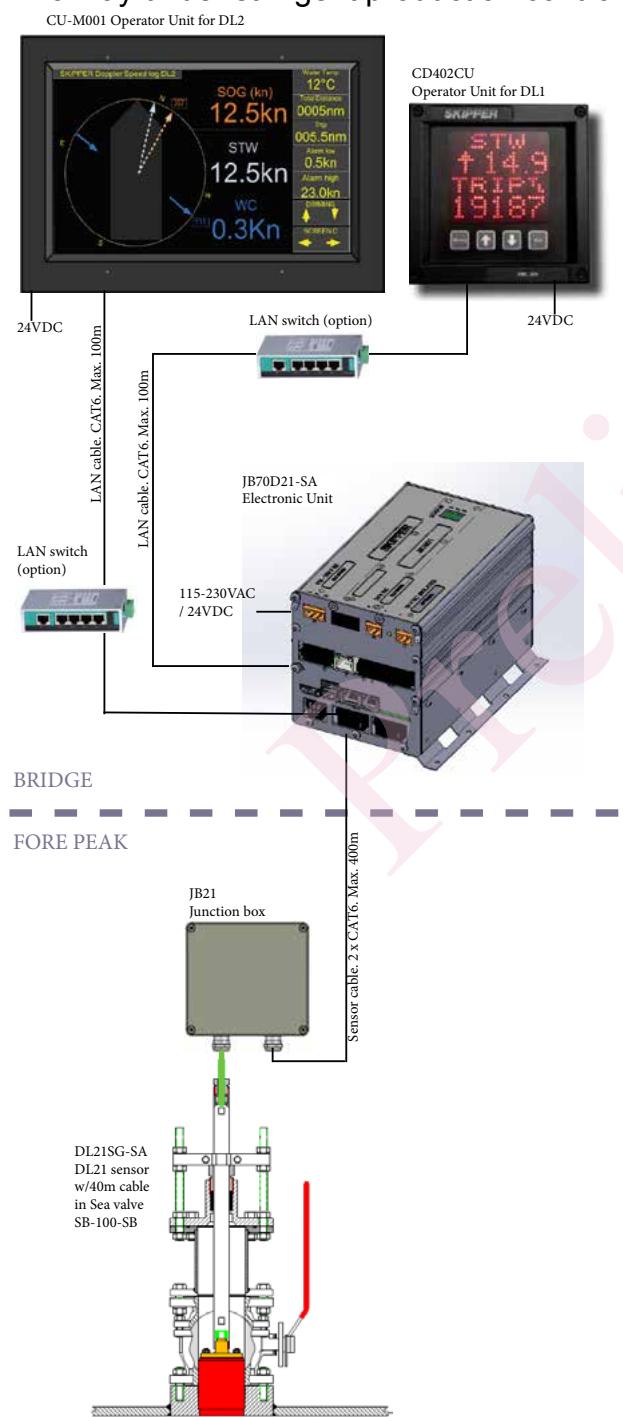

The DL21 system consist of:

2 Display units.

- CU-M001 for DL2
- CD402CU for DL1

1 Dual Electronic Unit

- Dual Power PCB
- Multi Ext. PCB for DL1
- Multi Processor PCB for DL2

Junction box JB21 (Optional)

Sensor DL21SG-SA

- STW Single axis + (STW+SOG) Dual axis sensor in one housing.
- Fits into same SB-100/DB-100 sea valve as the DL2 sensor.

OPTIONAL ITEMS DL21

The following items are optional SKIPPER supplied items.

- Speed Repeater
- External dimmer
- LAN switch

CU-M001 Operator Unit for DL21



24VDC

CD402CU
Operator Unit for DL1

24VDC

CD401MR
Repeater NMEA

24VDC

LAN cable, CAT6, Max. 100m

LAN switch (option)

LAN switch (option)

JB70D21-SA
Electronic Unit

115-230VAC / 24VDC

I/O DL1


I/O DL2

BRIDGE

FOR PEAK

JB21
Junction box

Sensor cable, 2 x CAT6, Max. 400m

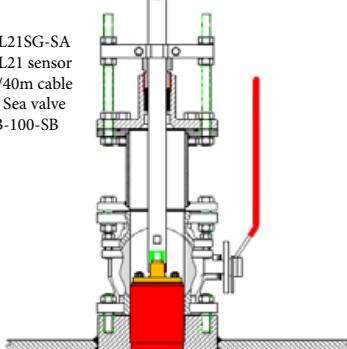DL21SG-SA
DL21 sensor
w/40m cable
in Sea valve
SB-100-SB

The sensor may be installed into sea valve for single bottom hulls (as shown) or sea valve for double bottom hulls.

SKIPPER Electronics supply a variety of sensor installation options for new buildings and retrofit.

Please contact SKIPPER Electronics for information.

ITEMS NOT SUPPLIED BY SKIPPER

The following items are not SKIPPER supplied items.

- LAN cable (minimum CAT6) from Operator units to Electronic unit.
- The sensor is manufactured with a 40m cable. The cable may be cut or extended. Extension cable is 6 pairs with individual screens, minimum CAT6 type.

POWER SUPPLY REQUIREMENTS

The following power supplies are required

- CU-M001. Operator Unit. 24VDC
- CD402CU
- JB70D21-SA. Electronic unit:
 - DL2: 24VDC and/or 115/230VAC Max 60W
 - DL1: Separate 24V DC Max 20W.

Optional items power supply requirement:


- CD401MR repeater. 24VDC
- IR31DIM-SA. External dimmer: 24VDC
- IR30DIM-SA. External dimmer: 5-30VDC
- LAN switch: 24VDC

CHAPTER 2: HARDWARE MOUNTING

The DL21 is a DL1 (single axis STW) + DL2 (Dual axis STW+SOG), built into 1 sensor housing, 1 electronic unit and 2 Display units.

For mounting of DL1 Operator unit (CD402) please see "Installation manual DL1" DM-M002.

For mounting of DL2 Operator unit (CU-M001) please see "Installation manual DL2" DM-M004.

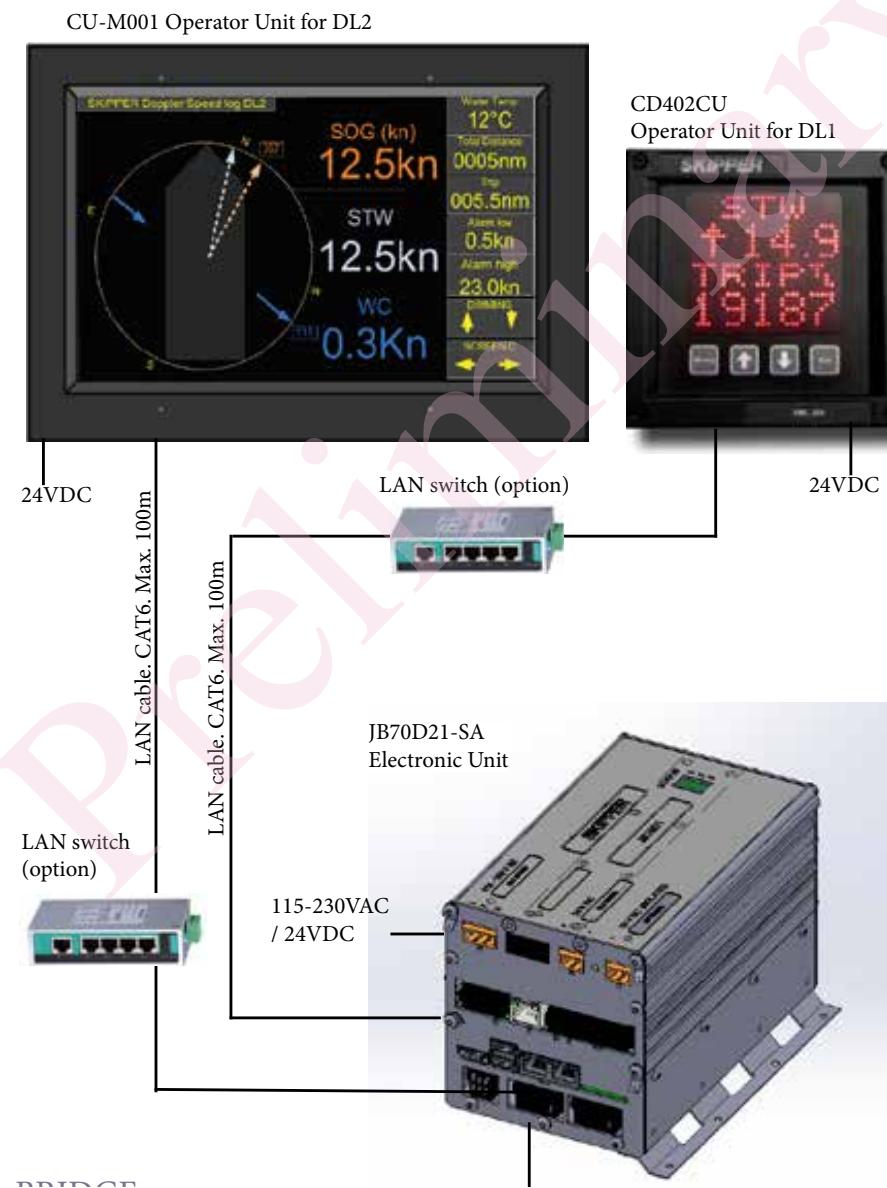

PLACEMENT OF THE ELECTRONIC UNIT


The Electronic unit can be installed on a DIN rail or directly screwed onto the wall.

All parts of the system are connected to the electronic unit.

There are no buttons (like ON/OFF) in the electronic unit. Access to electronic unit is only required for service purpose.

Placement is typically in or near the bridge where the interfaced systems are available, but no nearer than 0.5 m to the GYRO heading sensor.


Dimensional drawings are found in appendix1

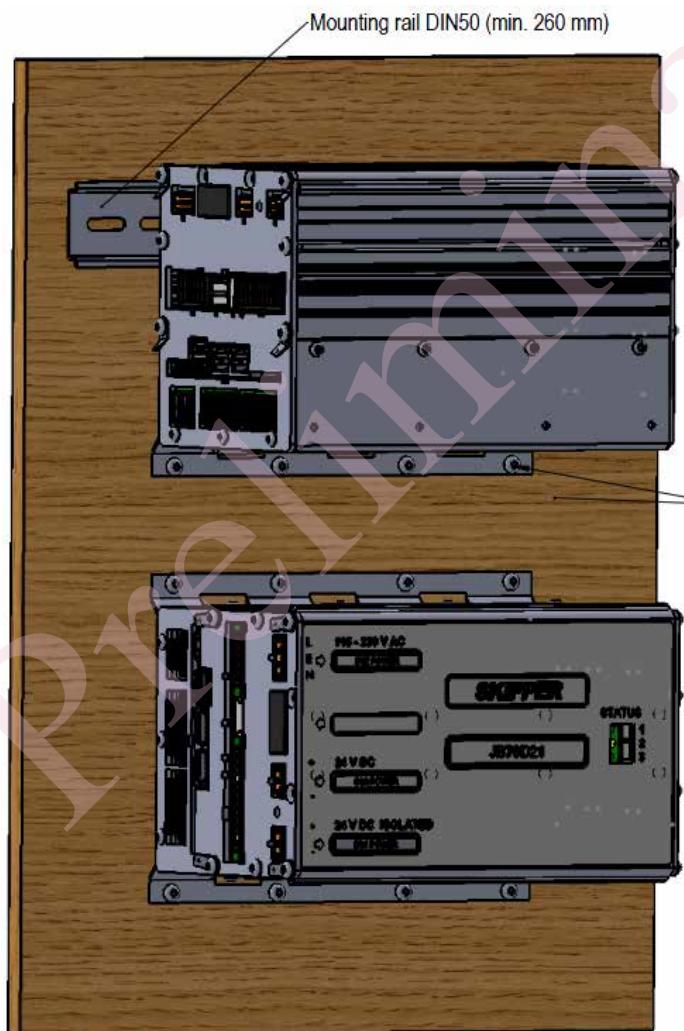

PLACEMENT OF THE SENSOR IN SEA VALVE

Mounting instructions for the sea valve is available from the SKIPPER web site in separate manual depending on the chosen type. When placing the speed log sensor, consider the following moments:

- Free sight to the bottom (it should be possible to draw a cone of +45 degrees from the sensor to the bottom).
- The active face of speed sensor must be in parallel to the horizontal line, max offset + -1° .
- Do not mount transducers aft of bow thruster, propeller outlets or aft of other hull installations (such as outlets, vents or other protruding details) that may create aeration or turbulence.
- It is necessary to select a part of the hull that is submerged and free from turbulence and aeration under all load and speed conditions, and to avoid positions where air is trapped in heavy weather.
- If a flat, horizontal section is not available for transducer fitting, the shipyard must construct a suitable bed. Welding seams in this area should be smoothed and rounded off in order not to create turbulence or aeration and maintain a laminar waterflow at all speed ranges of the vessel.
- Select an area that is acoustically quiet. The system operates at frequencies between 500 kHz and 750 kHz.


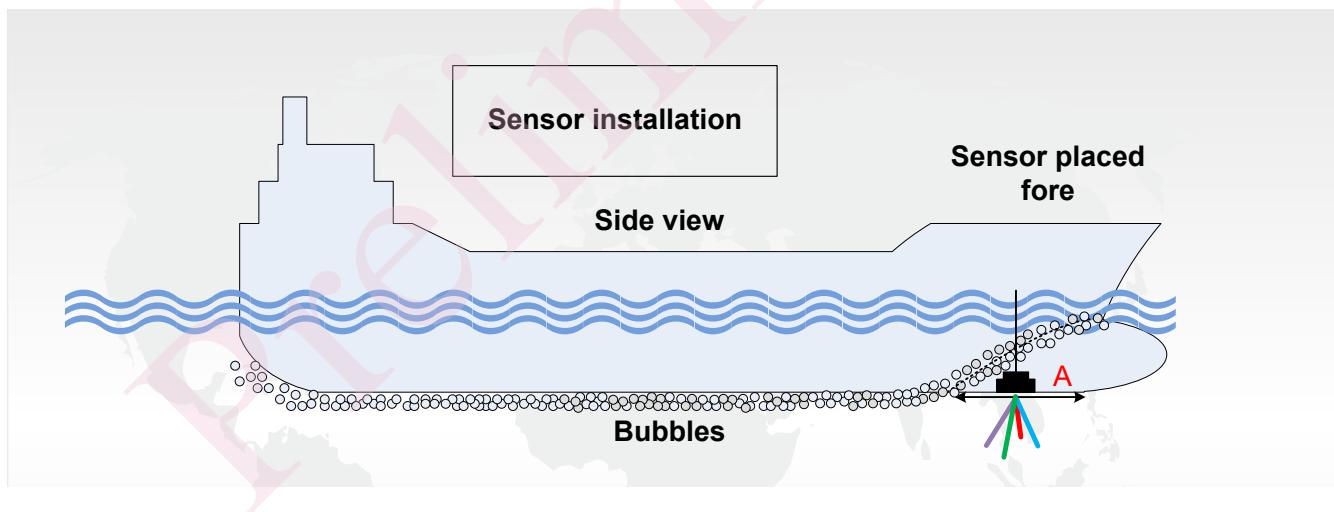



There are 6 acoustic channels in DL21

DL1 has 2 channels(Blue)

DL2 has 4 channels (Brown).

The acoustic signal is sent in a 30deg angle in 6 directions.

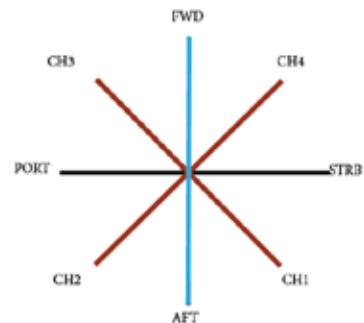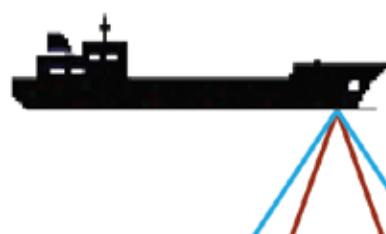

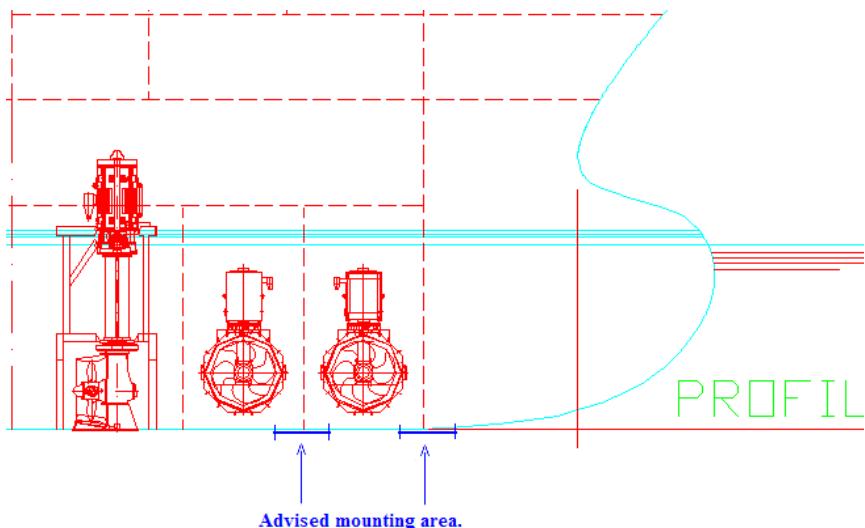

The generally best placement on larger vessels is in the front region of the vessel just behind the bulbous bow (see area A on fig above). This area is generally designed such that the bubbles are pushed to either side of the bulb, leaving a clear area under the bulb and just behind. The sensor is installed in a sea valve as it is possible to service the sensor (clean or replace) without docking the vessel.

It is recommended, but not required, to install the sea valve in a dry area, like a bow thruster room. This will enable easy cable access to junction box and additionally increase the lifetime of the sea valve.

The sensor DL21 is installed into sea valve 100mm for single bottom SB-100-SB or double bottom DB-100-SB.


Please see Sea valve manual for installation procedure.

Manuals available as downloads from www.skipper.no


The sensor includes 40m moulded in cable. The cable is 11 mm in outer diameter with a bending radius of 25 mm. The cable can be cut or extended if required



SB-100-SB
Operation and Installation Manual

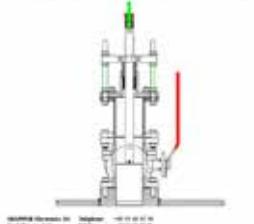


DB-100-SB
Operation and Installation Manual

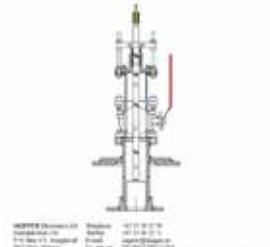

PLACEMENT OF JB21 JUNCTION BOX

The junction box JB21 is an option for connecting sensor cable to a yard supplied extension cable (2 x CAT6).

It is placed in a dry place within reach of the 40m sensor cable.

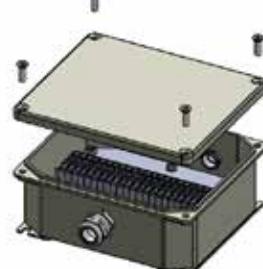

PLACEMENT OF REPEATERS

Repeaters are typically installed on the overhead console and/or the bridge wings. These can be routed using NMEA signals. These require a local +24 V DC supply.

CHAPTER 3: WIRING

OPERATOR UNITS WIRING


For wiring of DL1 Operator unit (CD402) please see "Installation manual DL1" DM-M002.
 For wiring of DL2 Operator unit (CU-M001) please see "Installation manual DL2" DM-M004.

The Operator units will communicate with JB70D21 over LAN.

Option 1: Direct.

There are 2 LAN ports on JB70D21. Any PC or LAN network may be connected to second LAN port.

Option2: Via LAN network. (as shown in picture)

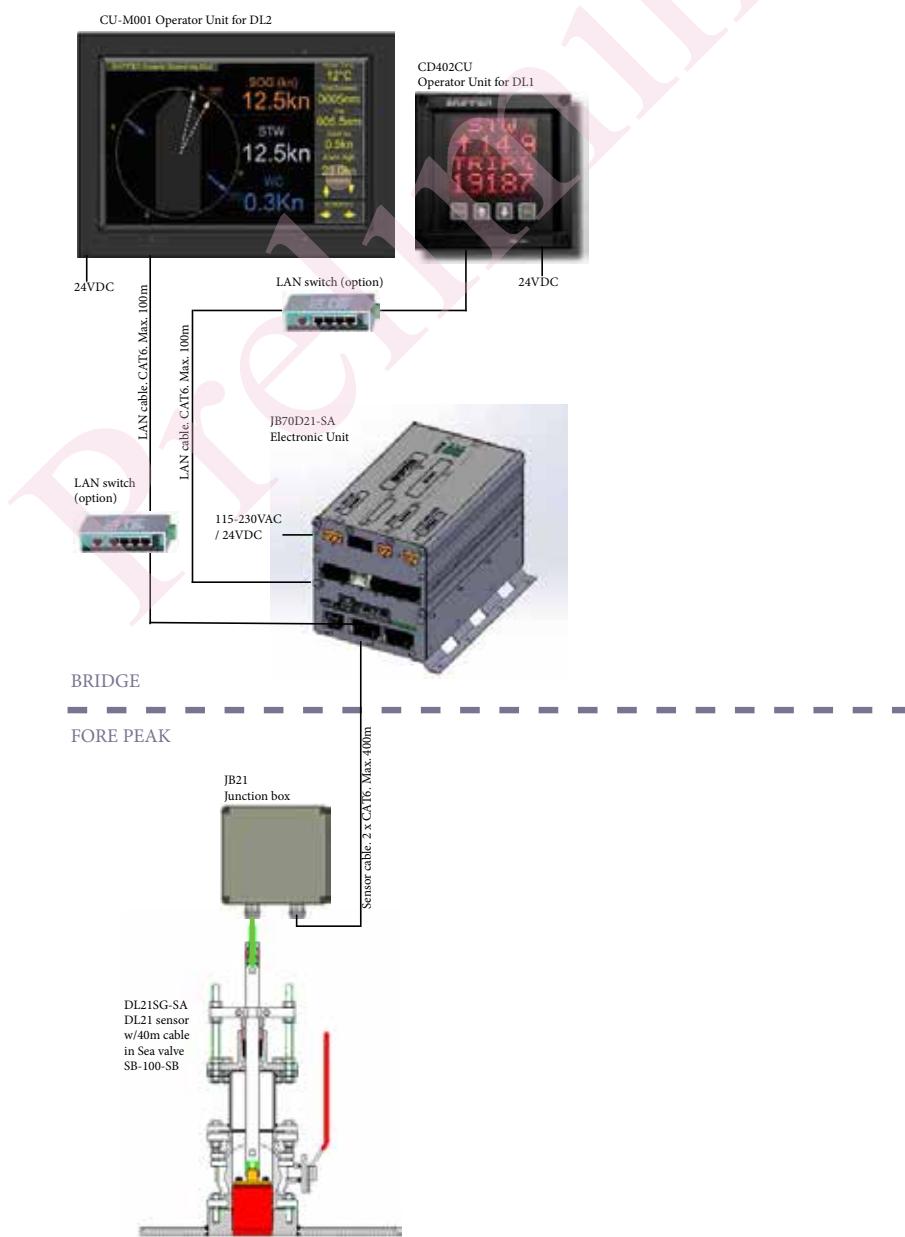

JB70D21-SA ELECTRONIC UNIT WIRING



The JB70D21-XX does not contain a physical switch (only software) and should be connected to a circuit breaker for removal of power.

The DL2 is powered from 24VDC and/or 115-220VAC.

The DL1 is powered from 24VDC Isolated input.


For wiring of DL1 Operator unit (CD402) please see "Installation manual DL1" DM-M002.

For wiring of DL2 Operator unit (CU-M001) please see "Installation manual DL2" DM-M004.

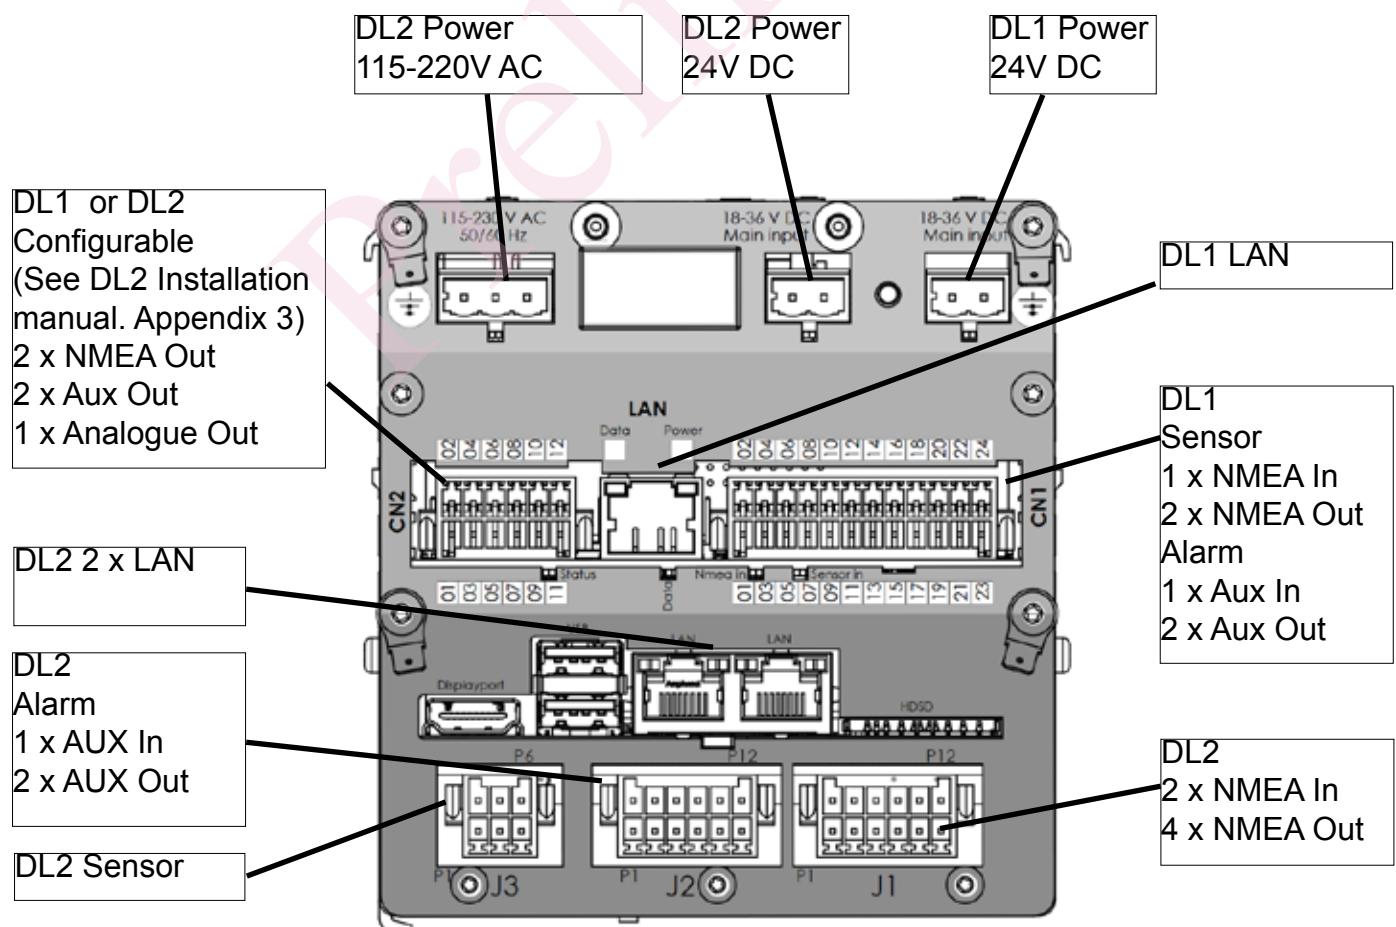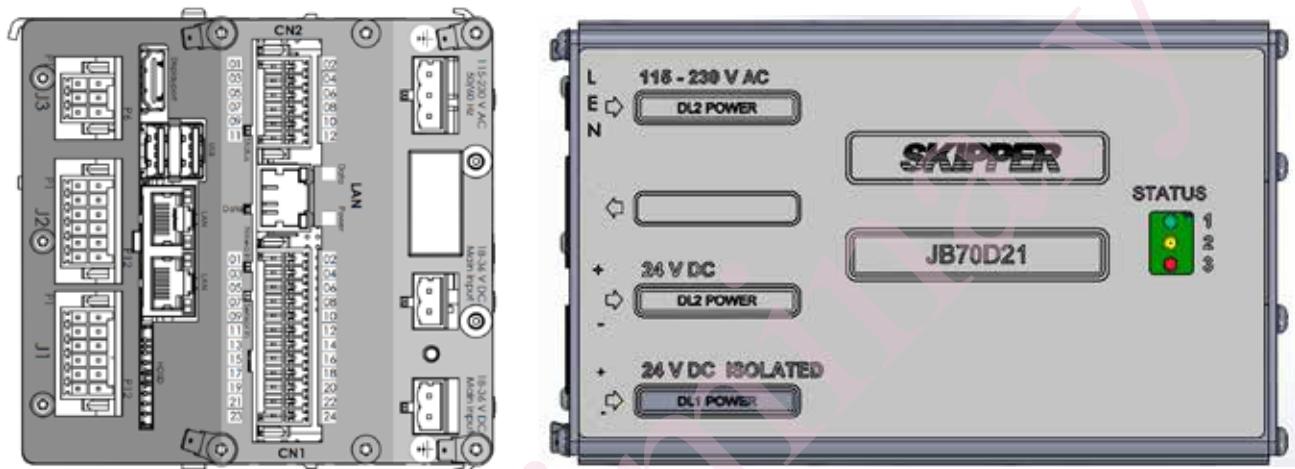

SENSOR CONNECTION J3 (DL2) AND CN1 (DL1)

The sensor is connected to JB70D21 Connector J3 and CN1 (See below diagram).
 The cable screen is connected to screen on sensor side and should not be grounded at JB70 side

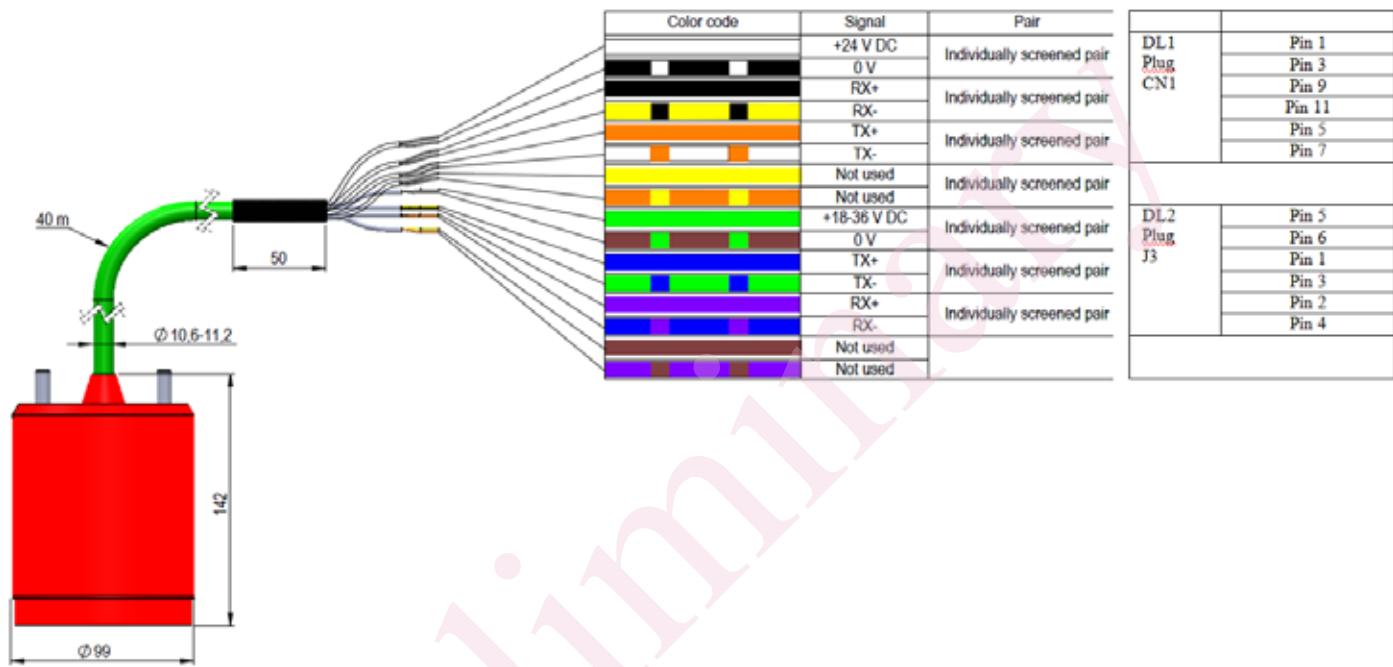

CHAPTER 3: STARTUP PROCEDURE

For setup of DL1 Operator unit (CD402) Electronic unit please see "Installation manual DL1" DM-M002.

For setup of DL2 Operator unit (CU-M001) please see "Installation manual DL2" DM-M004.


CHAPTER 4: OPTIONS

For options of DL1 please see "Installation manual DL1" DM-M002.


For options of DL2 please see "Installation manual DL2" DM-M004.


Please note that some options available on DL2 will not be available on DL21.

APPENDIX 1: INSTALLATION DRAWINGS

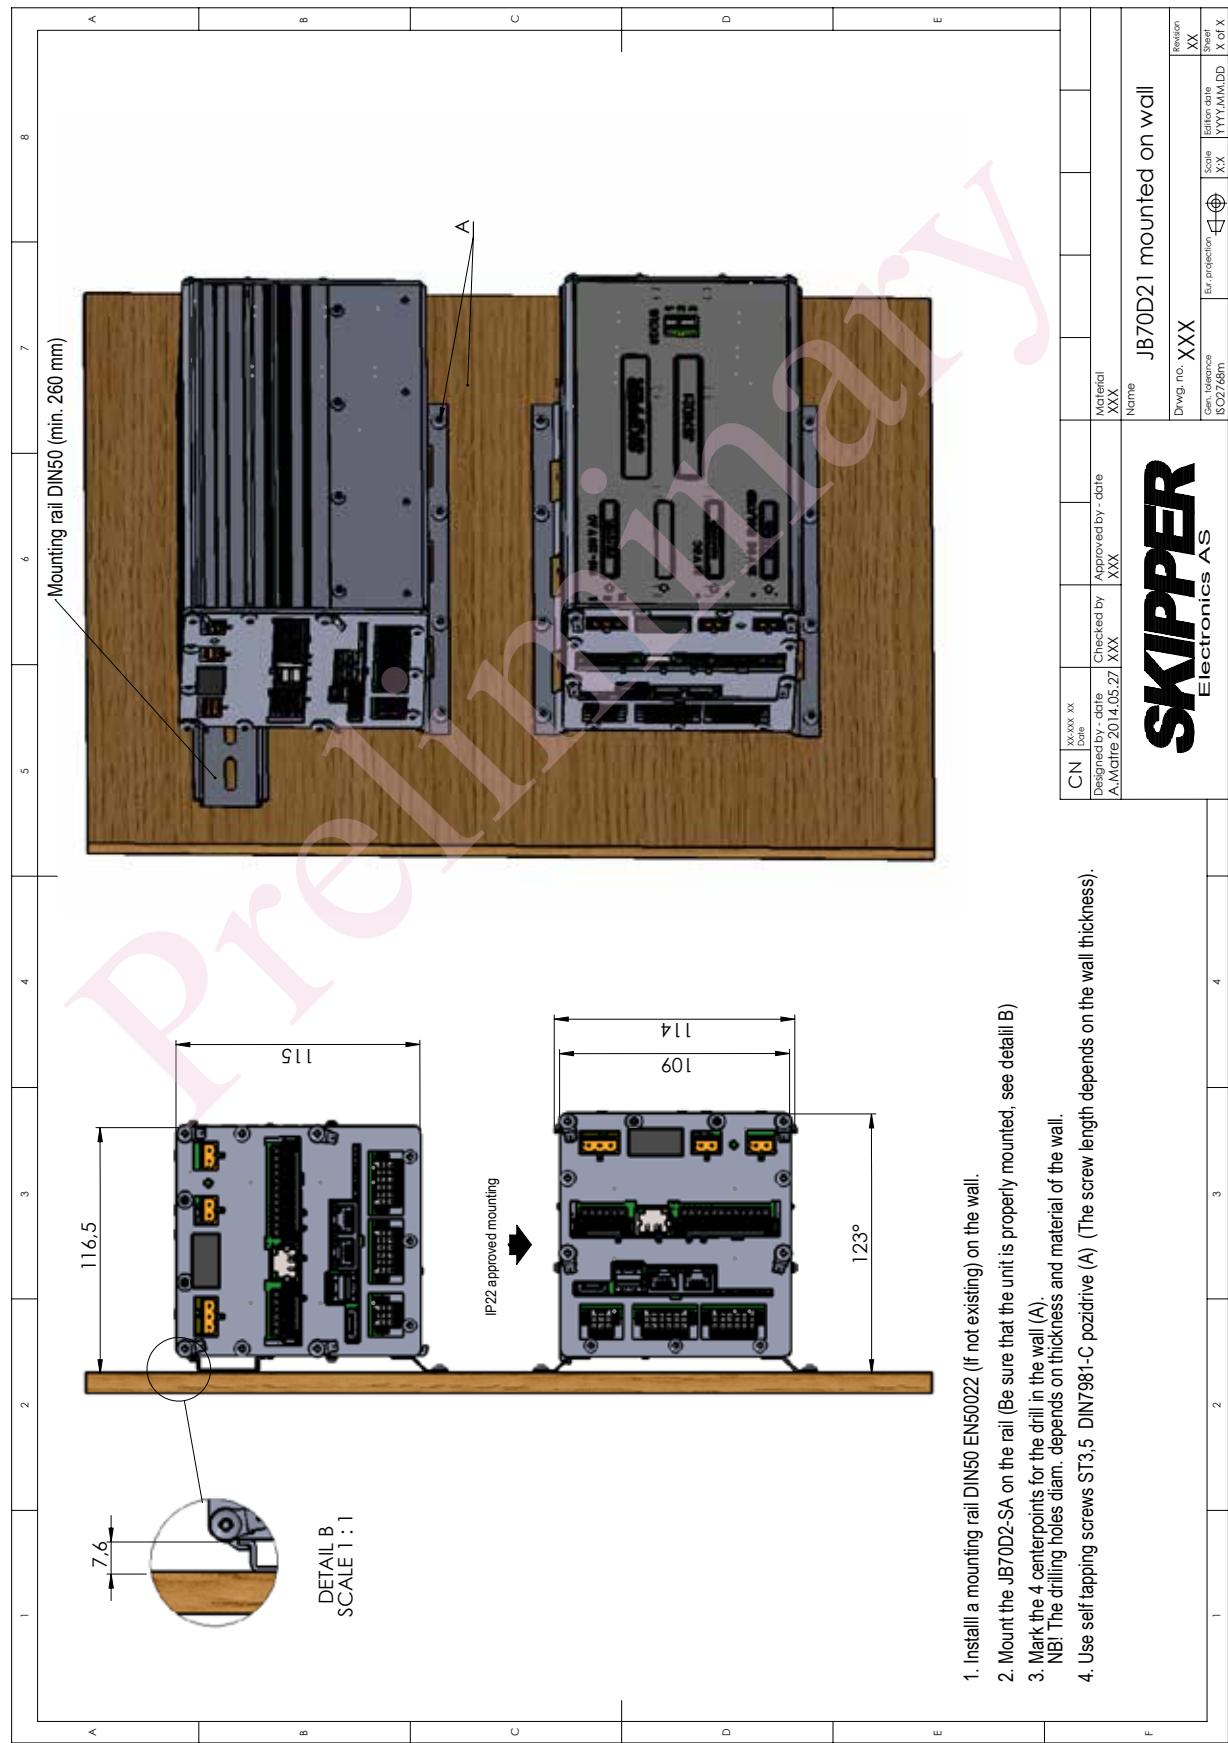

1. Install a mounting rail DIN50 EN50022 (If not existing) on the wall.
2. Mount the JB70D21-SA on the rail (Be sure that the unit is properly mounted, see detail B).
3. Mark the 4 centerpoints for the drill in the wall (A).
NB! The drilling holes diam. depends on thickness and material of the wall.
4. Use self tapping screws ST3,5 DIN7881-C pozidrive (A) (The screw length depends on the wall thickness).

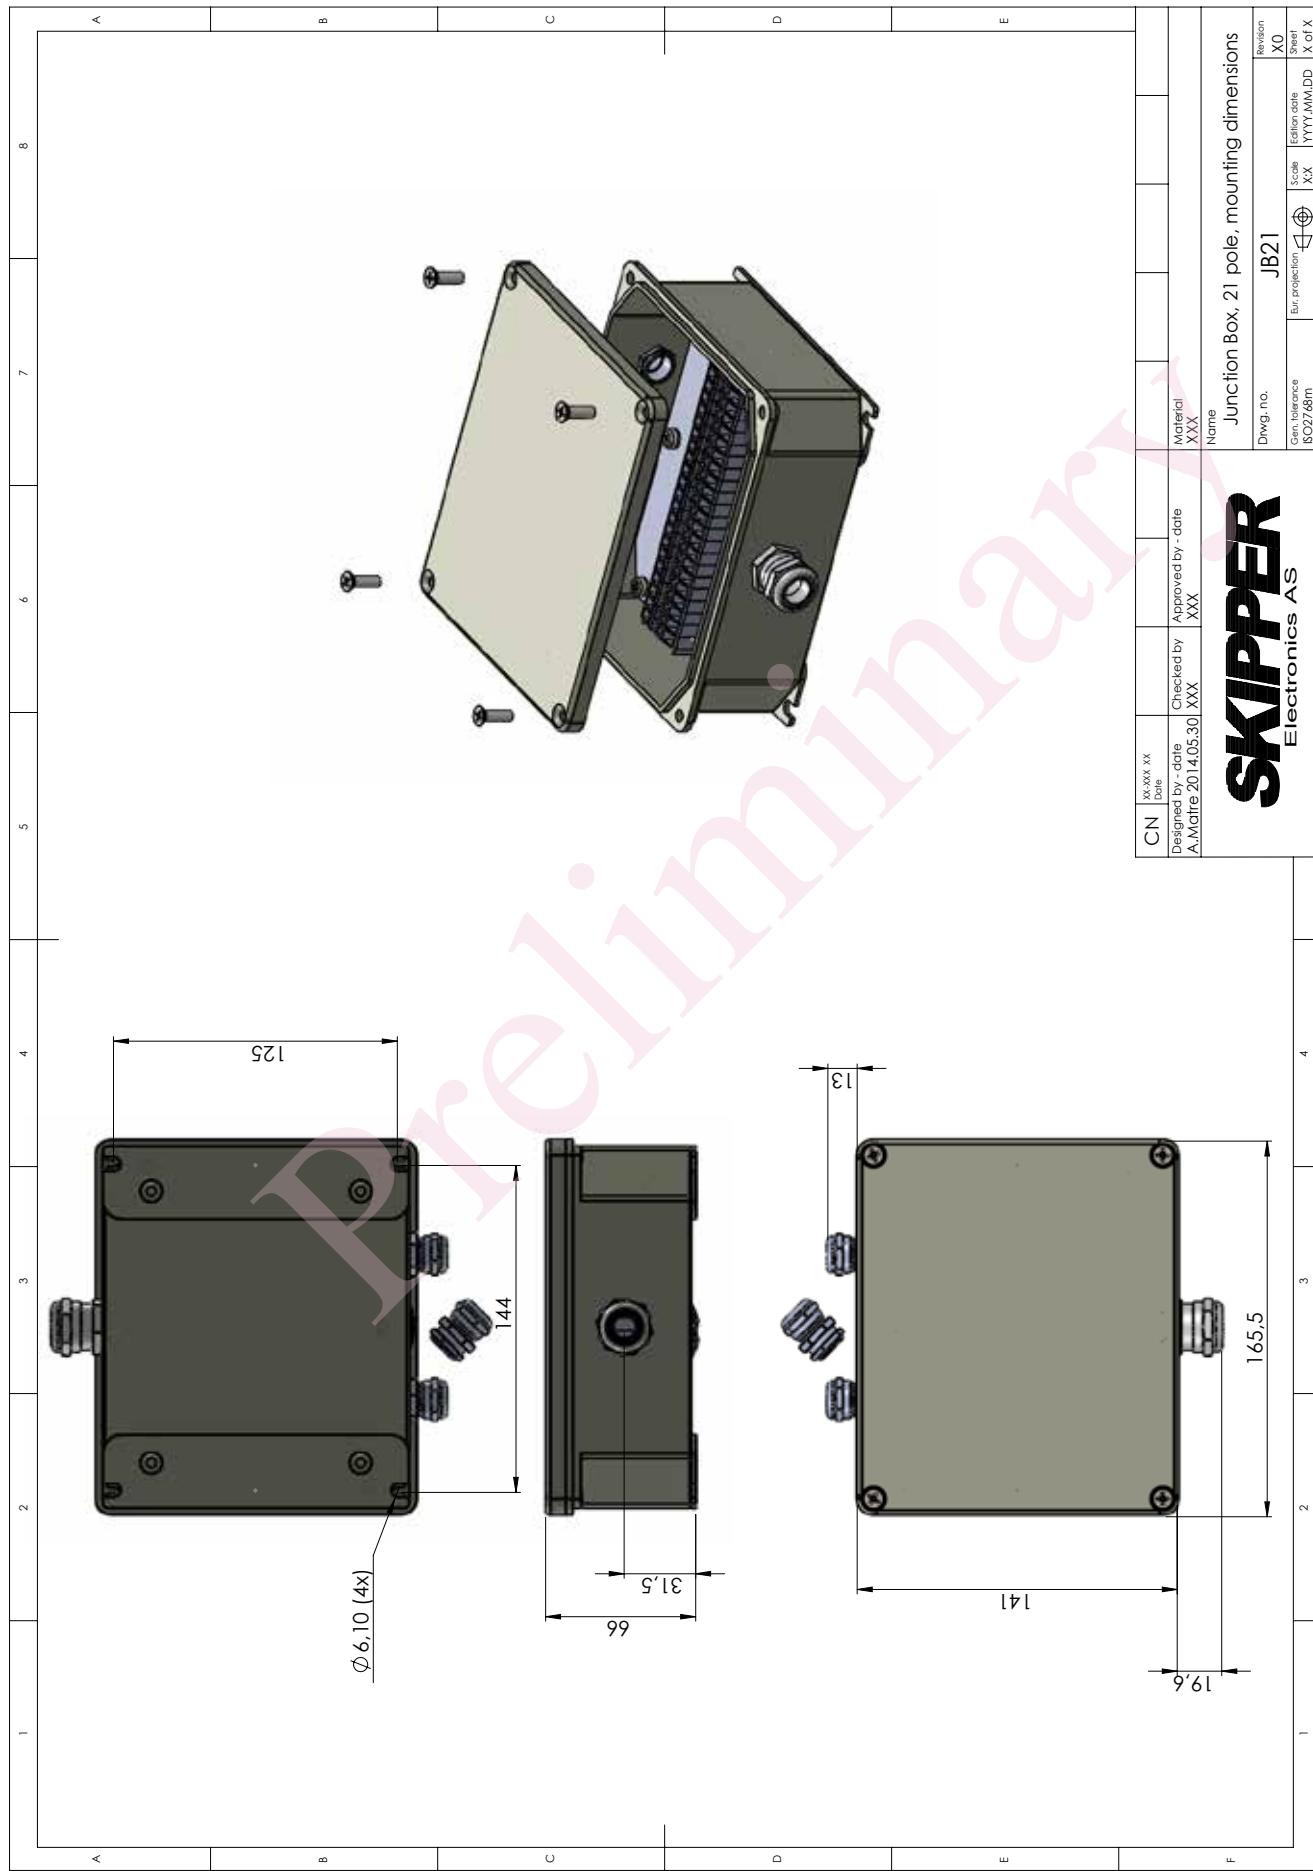

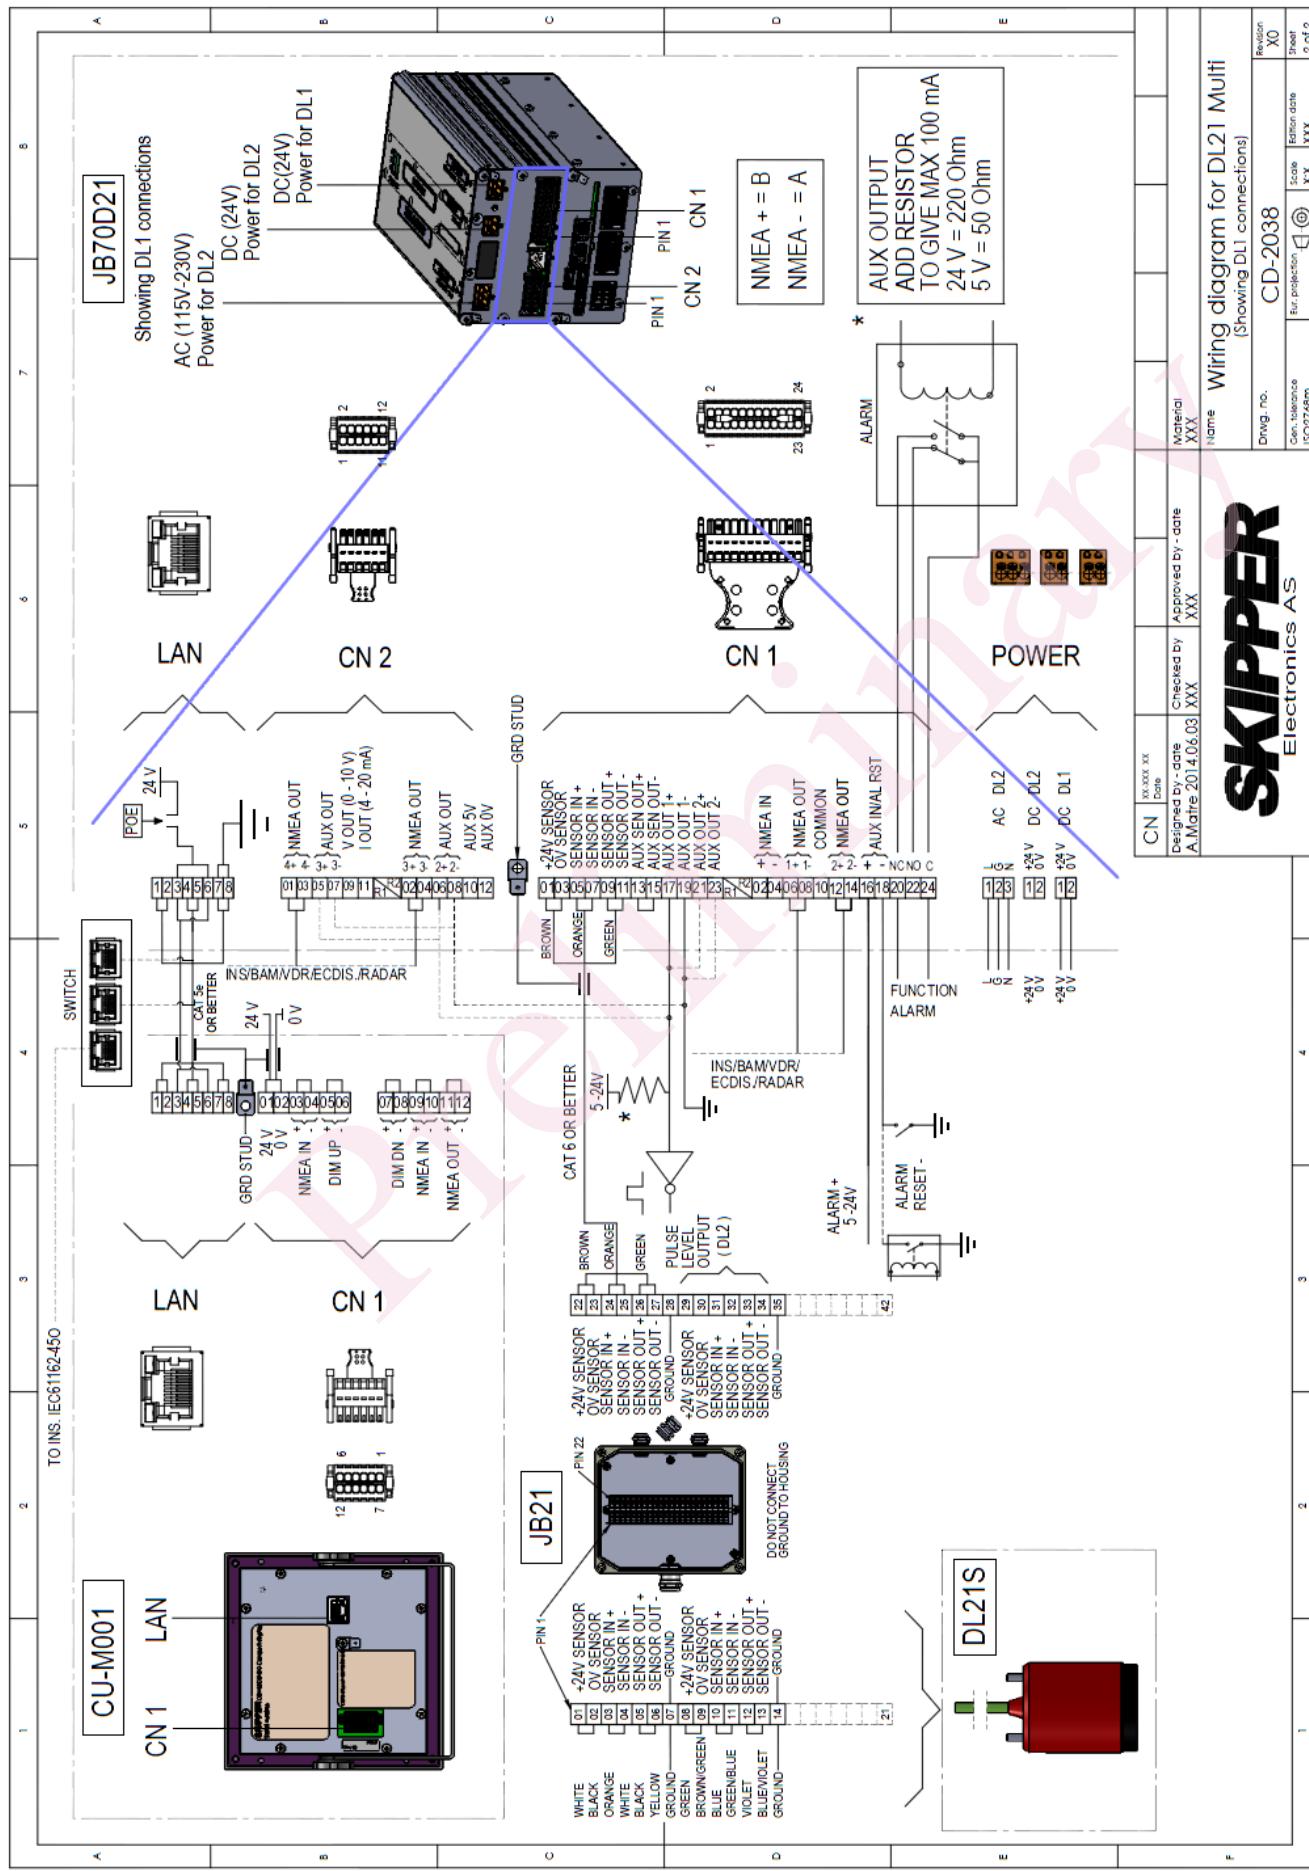


APPENDIX 2: DATA SHEETS

DATA SHEET CU-M001

***Product Datasheet
JB70D21-SA Electronic unit for
SKIPPER Doppler Speed Log DL21***

Specifications

	Part number	Description
Part number	JB70D21-SA	Electronic Unit for DL21
Control units	CD402CU-XX CU-M001-XX	Control Unit Compact with LAN Control Unit 9" Touch display
Sensors	DL21SXX or DL2SXX +DL1SXX	Dual 1 axis STW and 2-axis STW+SOG or 2-axis (STW+SOG) + 1-axis STW
Package consist of	JB70D21-SA M-KIT-JB70XX	Electronic Unit for DL21 Mounting Kit for JB70
PCBs inside Electronic unit	PP-M001 PI-M001 PC-M001	Multi Power, PCB I/O Multi extension, PCB Multi Main Processor, PCB
PP-M001 Power	115-230 VAC /24VDC Max 60W (For DL2) 24VDC Max 20W (For DL1)	Dual Isolated power supply.
PI-M001 Interfaces for DL1	NMEA 0183, IEC61162-1, 2 output, 1 input Auxiliary x 2 output, 1 input alarm relay x 1 IEC 61162-450 fully implemented web page setup	NMEA outputs can be used for IEC61162-2 Auxiliary can be designated to alarm, pulse, spd warning relay designated to function and/or powerfailure alarm configurable web pages for setup and runtime functions
PI-M001 Switchable interfaces	NMEA out 0183, IEC 61162-1, 2 output analogue 1 x 0-10V, 1x 4-20mA Auxiliary: 1 x output , 1 x input	Programmable outputs for DL2 or DL1 by switch CN1
PC-M001 Interfaces for DL2	NMEA 0183, IEC61162-1, 2 output, 1 input Auxiliary x 2 output, 1 input Alarm relay x 1 Analog output IEC 61162-450 fully implemented web page setup	NMEA outputs can be used for IEC61162-2 Auxiliary can be designated to alarm, pulse, spd warning relay designated to function and/or powerfailure alarm 0-10V, 4-20mA (DL21 configurable, DL2 option) configurable web pages for setup and runtime functions
IP rating		IP 22 (when mounted with PCBs vertical)
Weight		1.5 kg
Packaging dimensions / weight		30.5x21.5x21cm / 2 kg
Manufacturer		SKIPPER Electronics AS, Norway

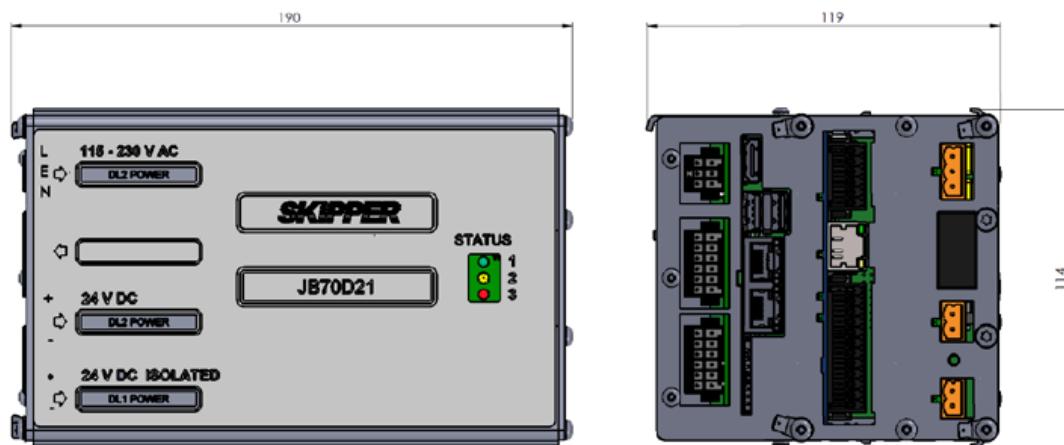

DATA SHEET DL2SG-SA

Product Datasheet
DL21SG-SA Log sensor DL21 for Sea Valve
SKIPPER Multi Serie

Spesifications

	Part number	Description
Part number	DL21SG-SA	Log sensor DL21for Sea Valve 1 Doppler sensor 1-axis STW 1 Doppler sensor 2-axis STW+SOG The 2 sensors mounted in one bottom mounting works independantly and are electrically isolated. Designed for ships over 50.000 GT with simultaneous and independent measurement of speed through water and speed over ground.
To be installed into	SB-100-XX DB-100-XX	Sea valve 100mm for single bottom hull Sea valve 100mm for double bottom hull
To be used with	JB70D21-XX	Electronic unit
Bottom detection (SOG)		< 120m
Cable length		40m (may be extended or shortened. Recommended 2 x CAT6 cable)
Cable diameter		11 mm +/-0.5
Cable minimum bending radius		25mm
Accuracy		0.2 kn or 2 % whichever is greater
Speed Resolution		0.1 kn
Max speed		+/- 50 kn
Temperature accuracy		1 deg
Temperature resolution		0.1 deg
IP rating		IP 68
Depth rating		6 bar
Operating temperature		-15 to +55 deg
Outputs		2 x NMEA (Proprietary formats)
Input		2 x NMEA (Proprietary formats)
Power input		2 x Nom. 24 V (15 V to 32 V) 16 W
Weight		10.2 kg
Manufacturer		SKIPPER Electronics AS, Norway



45cm * 44cm * 32 cm
10.2kg



NOTES

Preliminary

SKIPPER

SKIPPER Electronics AS
Enebakkveien 150
P. O. Box 151, Manglerud
0612 Oslo, Norway
www.skipper.no

Telephone: +47 23 30 22 70
Telefax: +47 23 30 22 71
E-mail: support@skipper.no
Co. reg. no: NO-965378847-MVA