




1. Loosen the strip nut.

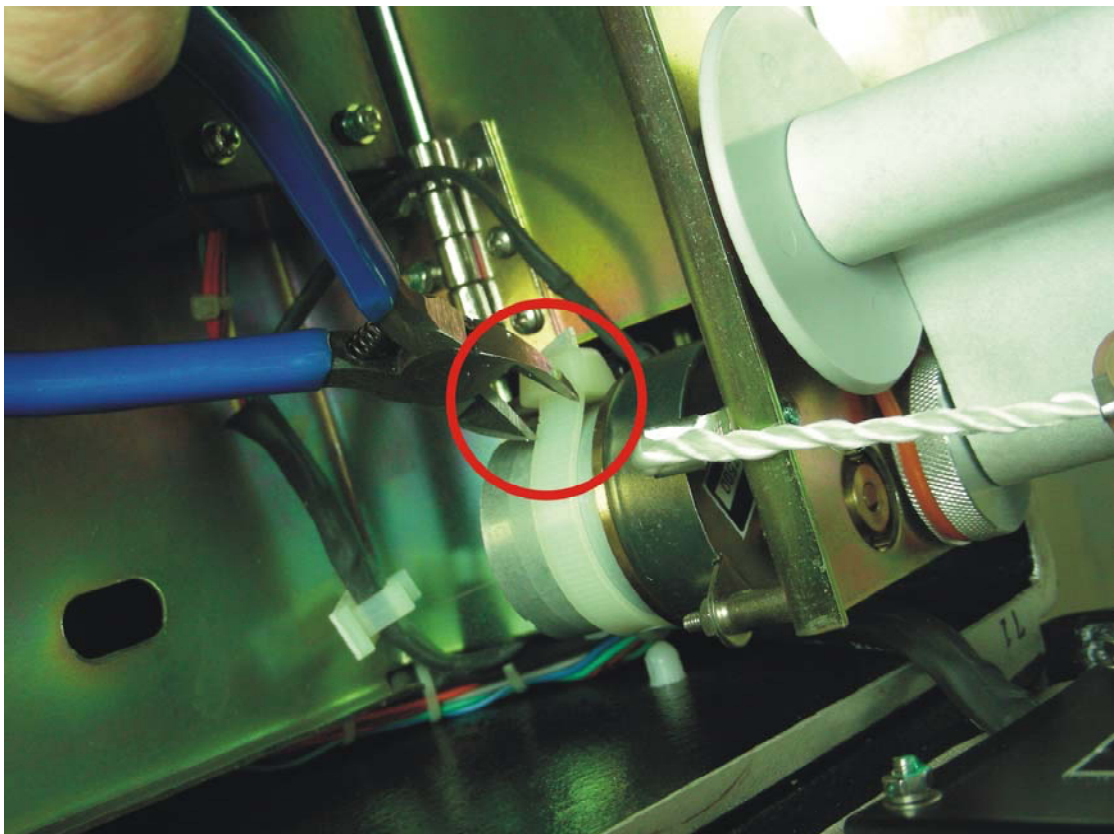

2. Cut the motor fasten belt.

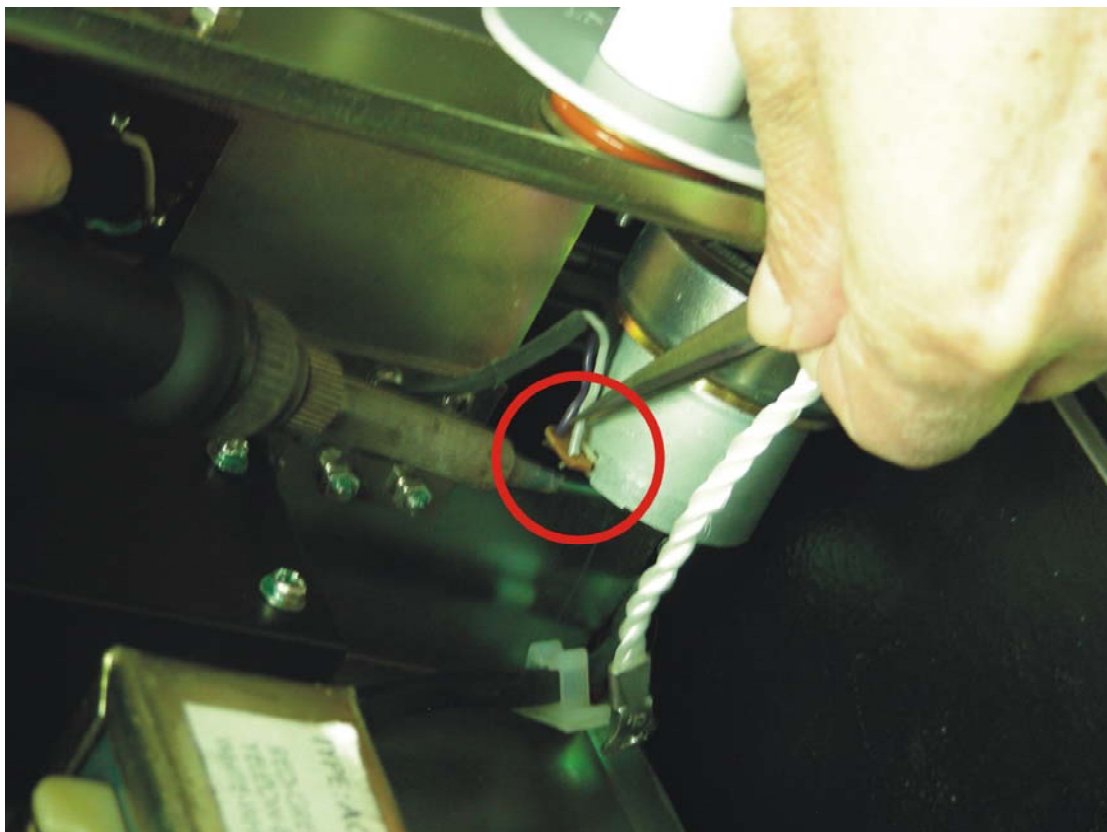

3. Take off the motor wire with iron.

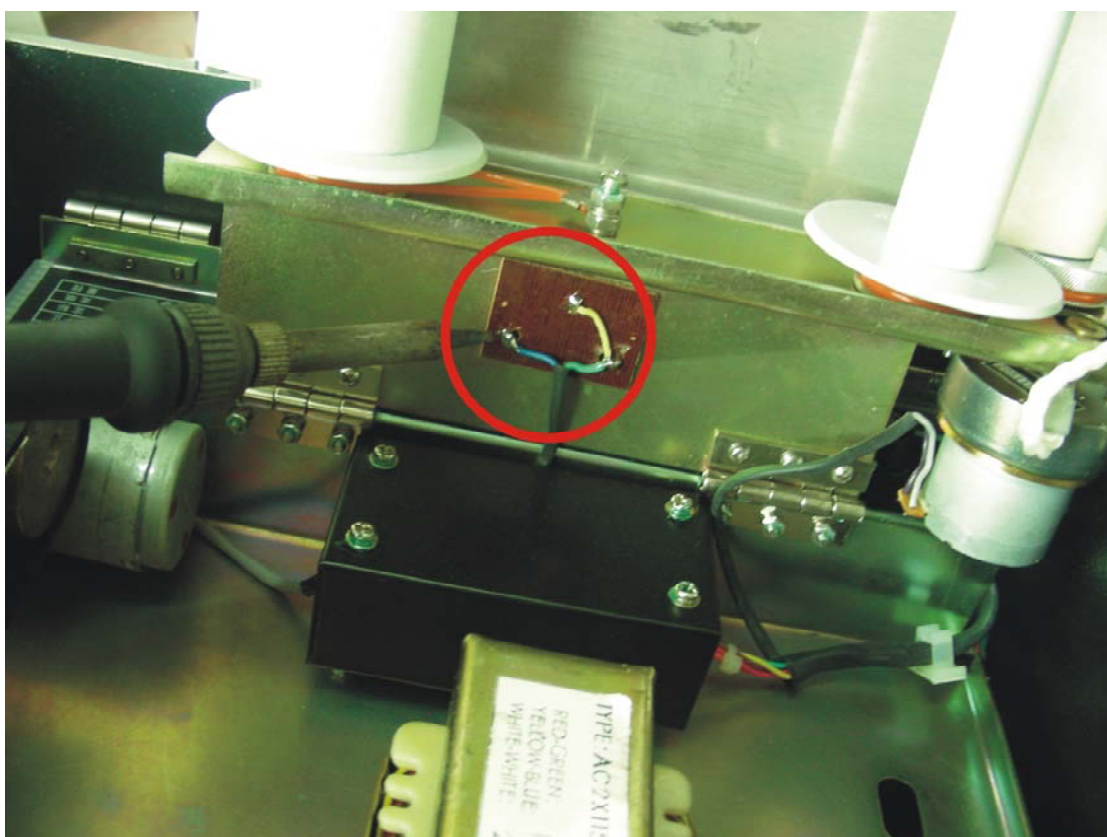

4. Take off the buzzer wire.