

IR300 Operation and Installation Manual



SKIPPER Electronics AS Enebakkveien 150 P. O. Box 151, Manglerud 0612 Oslo, Norway www.skipper.no Telephone:+47 23 30 22 70Telefax:+47 23 30 22 71E-mail:support@skipper.noCo. reg. no:NO-965378847-MVA

Document no: DM-R001-SA Rev 1.6A Edition: 20100615 Sw 1.6

Weitergabe sowie vervielfältigung dieser unterlage, verwertung und mitteilung ihres inhaltes nicht gestattet, soweit nicht ausdrücklich zugestanden. Zuwiderhandlungen verpflichten zu schadenersatz.

Toute communication ou reproduction de ce document, toute exploitation ou communication de ou son contenu sont interdites, sauf autorisation expresse. Tout manquement à cette règle est illicite et expose son auteur au versement de dommeges et intèrèts.

Copying of this document, and giving it to others and the use or communication of contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages.

Sin nuestra expresa autorización, queda terminantemente prohibida la Reproducción total o parcial de este documento, asì como su uso indebido y/o su exhibición o comunicación a terceros. De los infractores se exigirá el correspondiente resarcimiento de daños y perjuicios.

Contents

1. OVERVIEW4	
2. SYSTEM OVERVIEW	
3. BUTTONS AND DISPLAY	
4. OPERATION	
5. NMEA MESSAGES	
6. DIAGNOSTIC INFORMATION	
7. ENVIRONMENTAL ACCORDING TO IEC609459	
8. SERVICE	
9. IR300 CONNECTIONS	
10. IR30DIM	

1. Overview

The SKIPPER IR300 is a dual axis remote speed indicator for NMEA signals. It is designed for use with SKIPPER DL850 and SKIPPER EML224. It may also be used with speed logs from other manufacturers, when these have an NMEA 0183 output. It repeats information about transversal and longitudinal ship speed. The operator may select between bottom and water related speed when these are provided from the log. If both fore and aft transversal speed is available (docking mode), the IR300 will also display this information.

SKIPPER IR300 indicates trip and total distance measured by the log. If aft speed is available, it can be displayed by pressing the Trip/Total button until the indicator LEDs are both off. SKIPPER IR300 indicates trip and total distance measured by the speed log.

Brightness can be adjusted from:

- The front panel.
- A remote controller (IR30DIM).
- NMEA sentence DDC (Display Dimming Control).


Note: The display can be deactivated (system off) by pressing the up and down buttons <u>simultaneously</u>. The display will be reactivated when any button is pressed.

Features

- Speed indicator.
- Alarms speed alarm.
- Trip counter.
- Distance counter.
- One, two or three axis (Docking) indication.
- Bracket or panel mounting.

IR30DIM DL850 IR300 Speed 24 V DC 115/230 V AC 24V DC VDR Repeaters Bridge systems Conning display 115/230 V AC 24V DC Ext. display Alarm Transceiver 🧾 Radar Echo sounder cabinet Interfaces . 40 m multicore cable Mounting options: **:::** Tank Aluminium Sea Valve DB Sea Valve SB ETNSLB Tank

2. System Overview

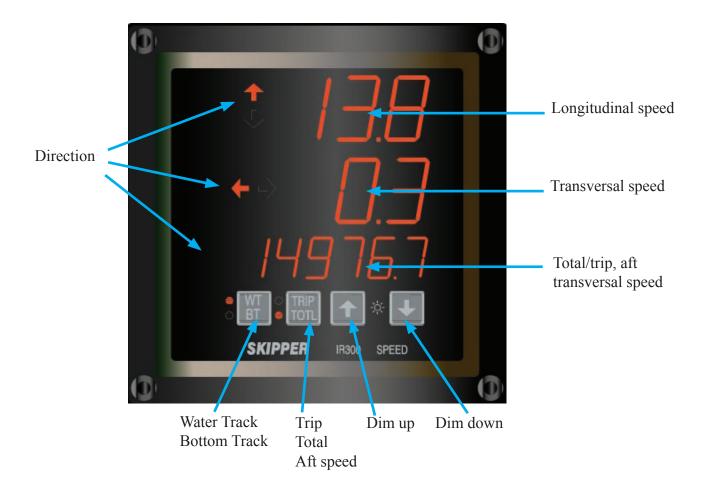

3. Buttons and Display

Name	Description		
WT (Water Track)	Speed through water (Longitudinal, transversal, transversal aft)		
BT (Bottom Track)	ck) Speed over ground. (Longitudinal, transversal, transversal aft)		
Trip Total and Aft Indication on 3rd line.			
↑ (Dim up)	(Dim up) 8 levels of dimming up.		
\downarrow (Dim down)	↓ (Dim down) 8 levels of dimming down.		
Longitudinal speed	ongitudinal speed in the fore-aft direction of the vessel.		
Transversal speed	ansversal speed in the port-starboard direction of the vessel.		
Total distance	tal distance The distance through water, daily trip value in NM or the transversal aft speed in kn.		
Direction	↑ : Fore		
	↓ : Aft		
	←, - Port		
	\rightarrow , - Starboard		

4. Operation

- 1. To switch the unit on, press any key, to switch off, press both up and down keys at the same time.
- 2. To adjust brighness of LEDs, press up/down arrows to find suitable setting. (Note*)
- 3. The IR300 has been adapted to show the Aft speed when available. This function can be activated by pressing the trip total button until the indicator LED does not light.
- 4. The display will primarily show values from the VBW NMEA sentence. If this is not available, the display will show VHW or VTG from other sentences. In these cases, there will be no value in the transveral speed.

Note*: Remote Dimming.

- Repeaters can be remotely dimmed by:

- Using external buttons (IR30DIM) connected to the DIM UP, DIM DN and DIMKEY of each repeater.
- Pressing up and down arrows on one repeater, when DIM lines are connected in parallel.
- Using NMEA command DDC as described in section 5.

Name	Description	Example	Comments
VBW	Dual Ground/Water Speed.	\$VBW,x.x,x.x,A,x.x,X,A,x.x,A,x. xA*hh <cr><lf></lf></cr>	
VTG	Course Over Ground and Ground speed	\$VTG,,,,,x,N,,,,*hh <cr><lf></lf></cr>	Only speed over ground in knots is accepted.
VHW	Water speed and heading	\$VHW,,,,,x.x,N,,,*hh <cr><lf></lf></cr>	Only speed in knots is accepted.
VLW	Distance traveled through the water	\$VLW,x.x,N,x.x,N*hh <cr><lf> \$VLW,x.x,N,x.x,N,x.x,N,x.x,N*hh</lf></cr>	Trip and total through water in NM. Trip and total through water (and over ground, not displayed) in NM.
ALR	Alarm status	\$ALR,hhmmss.ss,xxx,A,A, <alarm message>*hh<cr><lf></lf></cr></alarm 	
DDC	Display Dimming Control	\$DDC,a,xx,*hh <cr><lf></lf></cr>	Brightness percentage has priority over display dimming preset.

5. NMEA Messages

Accepted messages (received and transmitted) (NMEA 0183), talker identifier is not processed:

Note: Baud rate is fixed to 4800 baud.

Speed vectors directions (Fore/Aft, Port/Starboard) are displayed by arrow indicators, and no sign is presented in the digital value.

6. Diagnostic information

- If IR300 does not receive any signal from the external source for more than 3 seconds, "Error" ("Err") message is indicated on the LEDs. This may happen, for example if an external talker is not connected or connection polarity is not correct.
- If input messages do not contain sentences required for indication of selected data, "-" (minus) is indicated on the corresponding LEDs. Example: if there is no VLW message available on the input, IR300 will indicate "-----" instead of distance counter.
- If fields in the received message is empty (not valid data), dots are indicated on the corresponding LEDs. Example: if speed over ground fields are empty in VTG or VBW sentences and BT mode is selected on IR300, "..." will be indicated instead of speed value.
- If input message format is incorrect, e.g. the baud rate is incorrect, noise or incorrect polarity on the communications line, this will result in "-.-.-" in all positions.
- If an alarm message is received, the forward speed will be blinking until the alarm is acknowledged at the speed log or at an alarm central.


Power supply	DC: 10 - 32 V DC.		
Power consumption	3 W at 24 V.		
Display	2 lines with 7 segments 20 x 11 mm.		
	1 line with 7 segments 20 x 11 mm.		
Display outputs	Speed over ground (bottom track). • Longitudinal. • Transversal fore. • Transversal aft (docking). Speed through water (water track). • Longitudinal. • Transversal fore. • Transversal aft (docking). Distance travelled through water. • Trip • Total • Daily trip		
Mounting dimensions	124 x 124 mm. Bracket or panel mounting.		
Front plate	144 x 144 mm to DIN standard.		
Depth	59 mm.		
Weight cabinet	1 kg.		
Protection	IP 56.		
Resolution	0.1 kn.		
Outputs	1 x NMEA 0183 (IEC 61162-1:2007(E). (Fixed to 4800 baud).		
Inputs	NMEA 0183 (IEC 61162-1:2007(E). (Fixed to 4800 baud). Remote dimmer input.		
Classification	Follows standards as required for use with MED B equipment (IEC 60945).		
Service	Available in most major harbours, world-wide through extensive dealer network.		
Operating temperature	-15 - 55 degrees C. To increase serviceability and lifetime, we suggest the working temperature to be held at 0 - 40 degrees C		
Storage temperature	-20 - 70 degrees C.		
Humidity	10 - 90 % relative, no condensation.		

7. Environmental according to IEC60945


Note: The IR300 is classed IP 56 and may be mounted externally, but should be covered when not in use.

8. Service

- All service requests should be made to the local SKIPPER representative.
- Adjustments and repairs should only be performed by qualified service engineers, and unqualified repair attempts will void the warranty.

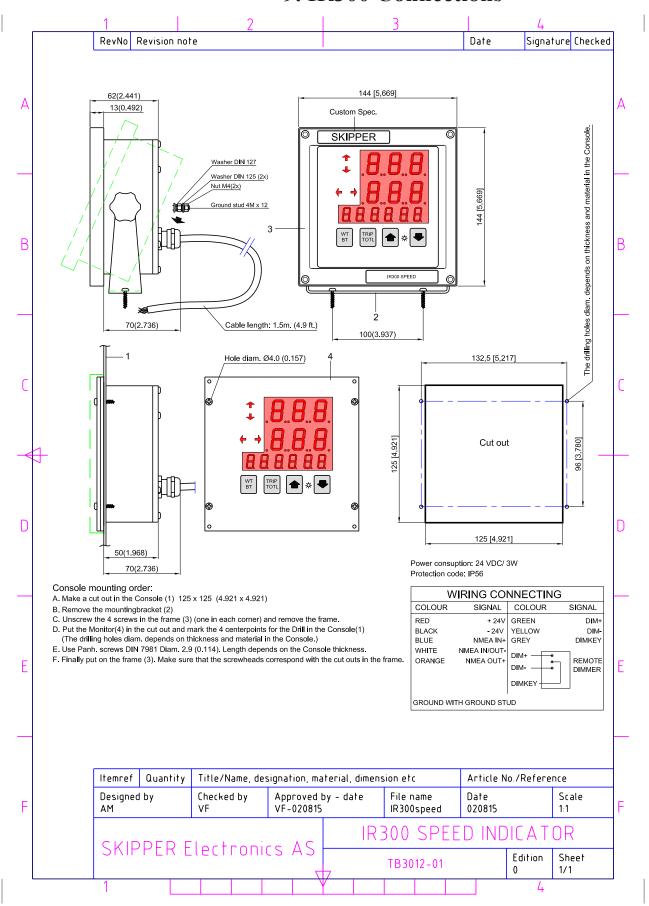

9. IR300 Connections

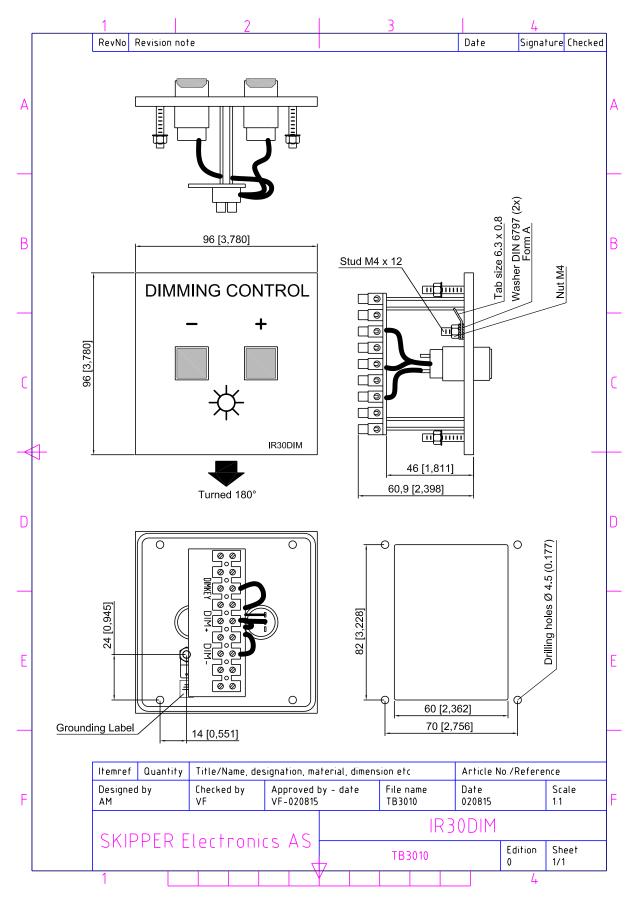

10. IR30DIM