

| | | | | | | | | |
|---|-------|---------------|---|---|---|------|-----------|---------|
| 1 | RevNo | Revision note | 2 | 3 | 4 | Date | Signature | Checked |
|---|-------|---------------|---|---|---|------|-----------|---------|

A

B

C

D

E

F

A


B

C

D

E

F

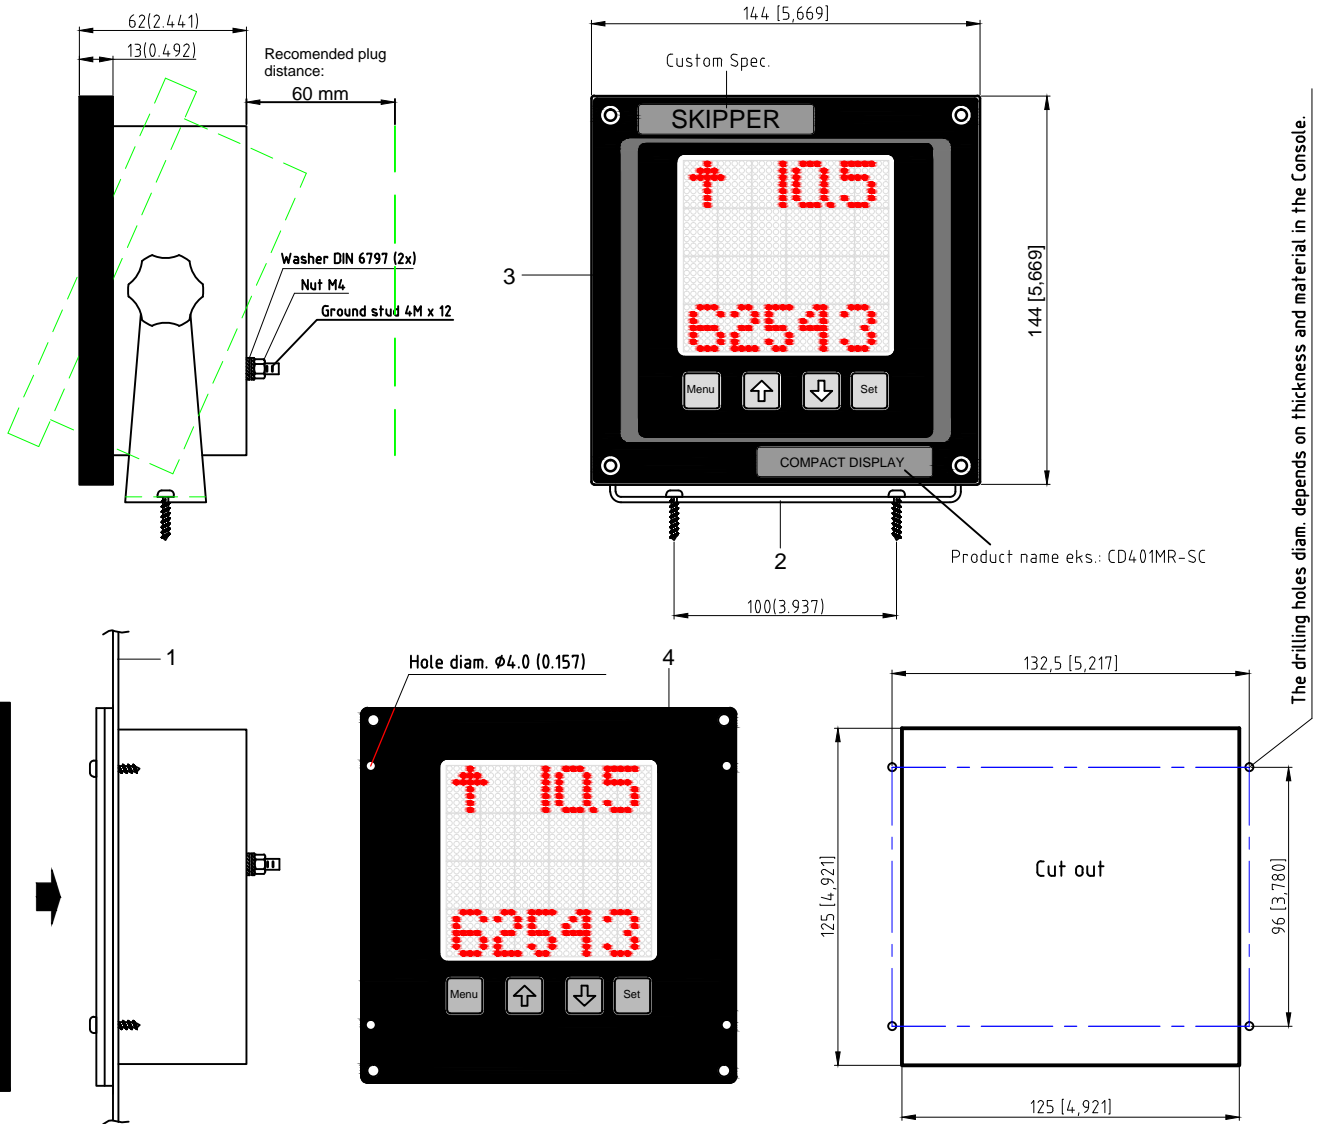

Power consuption: 24 VDC/ 3W
Protection code: IP56

Console mounting order:

- A. Make a cut out in the Console (1) 125 x 125 (4.921 x 4.921)
- B. Remove the mountingbracket (2)
- C. Unscrew the 4 screws in the frame (3) (one in each corner) and remove the frame.
- D. Put the Monitor (4) in the cut out and mark the 4 centerpoints for the Drill in the Console (1)
(The drilling holes diam. depends on thickness and material in the Console.)
- E. Use Panh. screws DIN 7981 Diam. 2.9 (0.114). Length depends on the Console thickness.
- F. Finally put on the frame (3). Make sure that the screwheads correspond with the cut outs in the frame.

| | | | | | | |
|------------------------|------------|--|-----------|----------------------------|-----------------------|---------------|
| Itemref | Quantity | Title/Name, designation, material, dimension etc | | | Article No./Reference | |
| Designed by A.Matre | Checked by | Approved by - date | File name | Date 2012.11.07 | Scale | |
| SKIPPER Electronics AS | | | | CD401MR-SC- mounting order | | |
| | | | | x | Revision XX | Draw. Edition |