

Service data bulletin



Instrument: GDS101 Date: 27.03.2009


Created by: Geir Theodorsen

SUBJECT: Installing remote keyboard on GDS101 Echo sounder





SKIPPER RP200 Remote keybord

The remote keyboard is connected to Keyb+, Keyb- and Inhib+. The Jumper JP200 must be in place (betwen Blue relay and black diode in picture) This jumper will provide 24V DC to Inhib+.

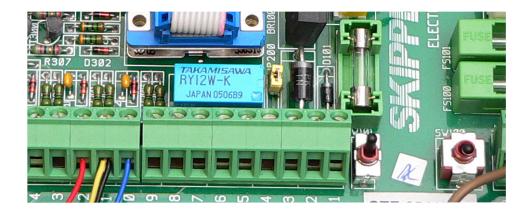

GDS101 Terminal board will normally not be supplied with pins for jumper and will need soldering.

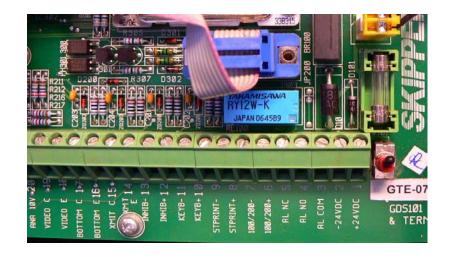

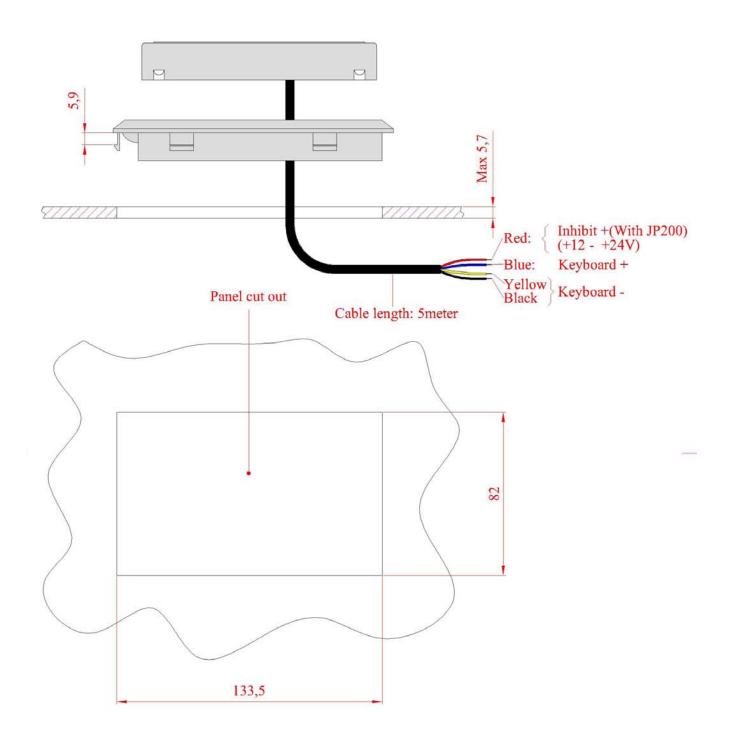

Itemref	Quantity	Title/Name, designation, material, dimension etc				Article	Article No./Reference		
Designed by A.Matre		Checked by XXX	Approved by - date XXX - 00/00/00		File name XXX	Date 2008.01.23		Scale	
CIZID	DEDE	lastnan	ica 1/5		Cut o	out RP	200		
SNIP	PERE	techron	ics A/S	Ţ	3-3017-Rev-	0 0	Edition 0	Shee 1/1	
4							1		